



Cabane V Fitting Blank (30421)  
Use .190 4130 plate to combine 30411 and  
30421 into one piece.

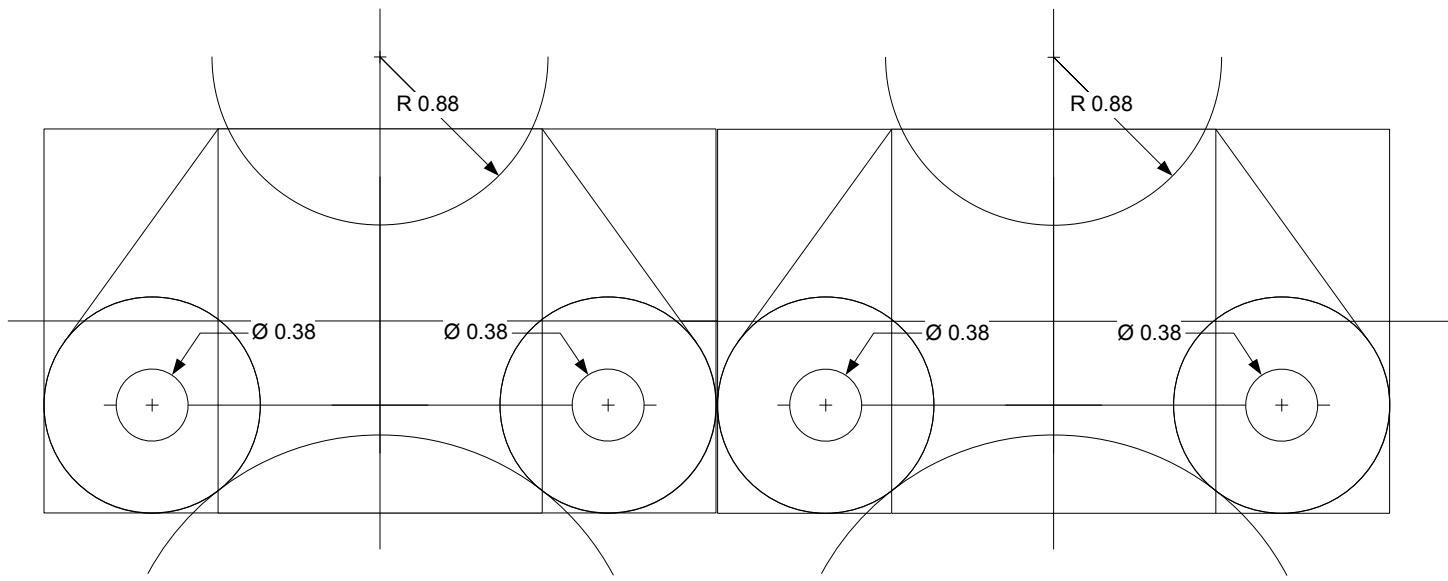

80342-9  
Cabane tube reinforcement plates  
1 x 3.25 x .062

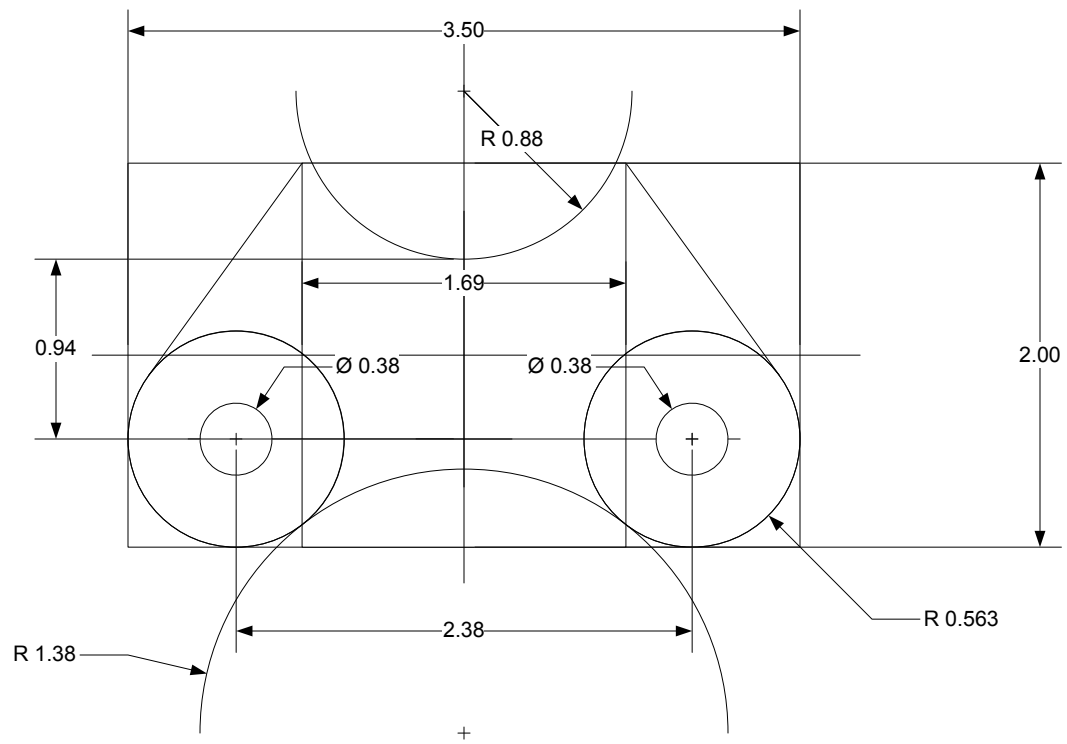